

# SemiQCM<sup>®</sup> CR Sensor

## Description

INFICON<sup>®</sup> SemiQCM CR sensors, designed for harsh chemical environments, offer a proven solution for material deposition monitoring, clean endpoint detection, precursor ampoule depletion, and precursor delivery fault detection. The sensor can be installed on a chamber wall or foreline of a semiconductor tool via an ISO KF-25, KF-40, or CF-40 port, with both straight and right-angle BNC connector options. The sensor is capable of monitoring a sub-monolayer level of mass change, ideal for most advanced CVD and ALD processes. By connecting to FabGuard<sup>®</sup> software via an IMM-200 deposition monitor, the SemiQCM CR sensor becomes an integrated part of the tool and serves as an in situ process monitoring system to improve the yield and minimize the potential wafer scrap.


## Specifications

Maximum temperature	200°C
Sensor head size (maximum envelope)	23.9 mm O.D. x 29.2 mm (0.94 in. O.D. x 1.15 in.)
Sensor length (in vacuum)	50–150 mm (1.97–5.91 in.)
Mounting feedthrough	ISO KF/CF flange

## Materials

Body and holder	Aluminum
Springs	Beryllium nickel
Coax line	6.4 mm (0.250 in.) O.D., nickel 625
Other mechanical parts	Nickel 200, aluminum, or nickel C276
Insulators	>96% Al <sub>2</sub> O <sub>3</sub> in vacuum; Teflon <sup>®</sup> used elsewhere
Wire	Ni in vacuum, Ni-plated Cu elsewhere
Braze	Vacuum-process high-temperature NiCr alloy
Crystal	14.0 mm (0.551 in.) diameter

## Dimensions

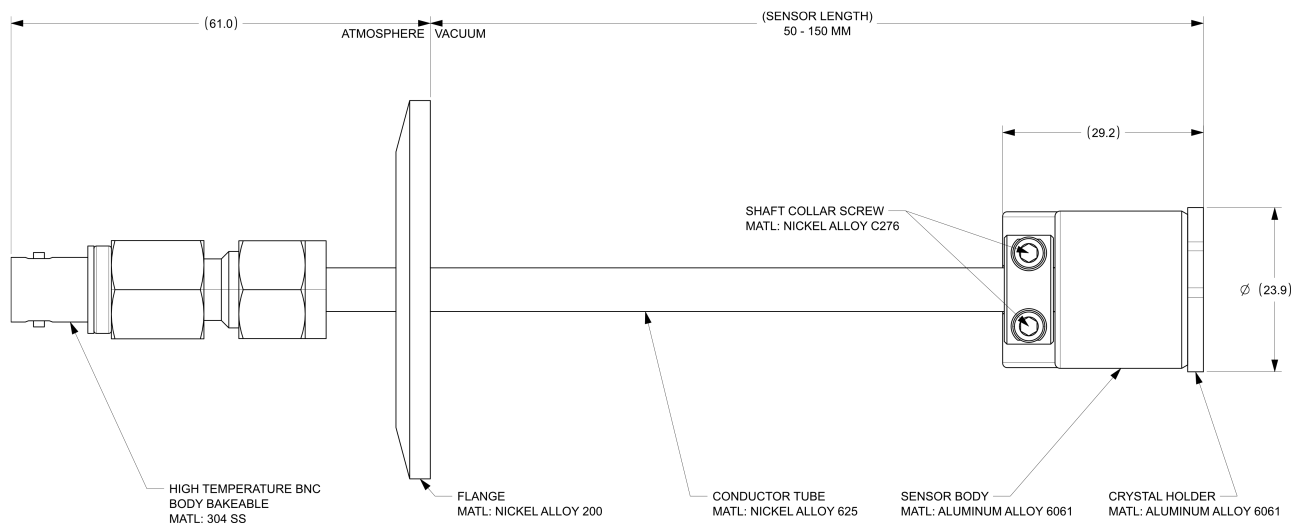


## Crystal Replacement


### NOTICE

Avoid touching the crystal. Only handle the QCM crystal with Teflon tweezers and only handle the outer edges of the crystal.

- 1 Remove the QCM sensor from the installation location by releasing the ISO KF clamp or CF screws.

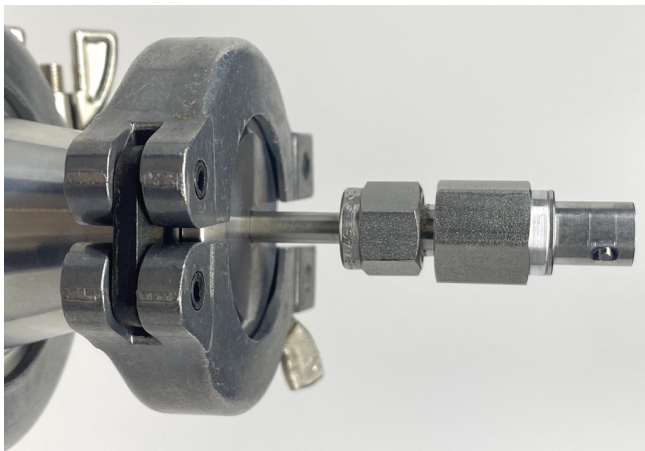

- 2 Twist the crystal holder counterclockwise to align the locking pin, then pull the crystal holder straight out of the QCM sensor body.

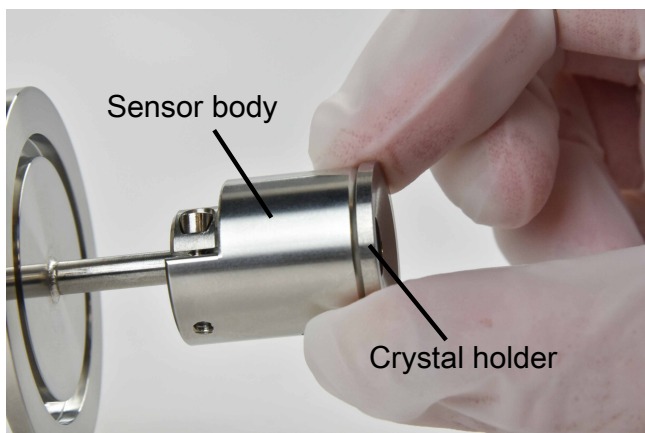

- 3 Insert the tapered end of a crystal snatcher (PN 008-007) into the ceramic retainer as shown below and apply a small amount of pressure. This locks the ceramic retainer to the snatcher and allows the ceramic retainer to be pulled straight out.



- 4 Invert the crystal holder to allow the crystal to drop out.
- 5 Using Teflon tweezers, grasp the edges of the new crystal. Orient the crystal so the patterned electrode is facing up. Gently insert the edge of the crystal beneath one of the wire segments inside the crystal holder. Release the crystal and ensure the crystal has dropped past both wire segments in the crystal holder. If necessary, use the tweezers to gently push the edge of the crystal to fully seat it in the crystal holder.



- 6 Replace the ceramic retainer by inserting it at a slight angle and pressing down gently. Avoid using excessive force when handling the ceramic retainer to prevent breakage. Avoid rotating the ceramic retainer after installation to prevent scratching the crystal electrode.



- 7 Use a slight side-to-side rocking motion to release the ceramic retainer from the crystal snatcher. Pull the crystal snatcher up and out of the crystal holder. Turn the crystal snatcher around and use the back side to gently press the ceramic retainer to ensure it is completely seated in the crystal holder.
- 8 Reinstall the crystal holder into the sensor body by pressing the crystal holder straight in, making certain that the crystal holder is completely seated in the sensor body. Some force is required, but ensure that the crystal is not used for leverage.
- 9 Twist the crystal holder clockwise to lock in place.
- 10 Install the QCM sensor back on the installation location with the ISO KF clamp or CF screws and the appropriate centering ring or metal gasket.